


Edge on Concrete or Asphalt

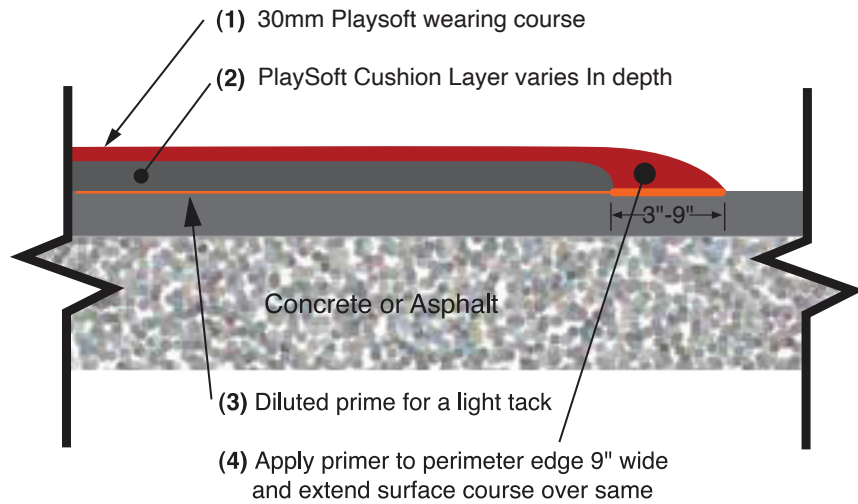

Note:

- 1) Surface course shall measure minimum 30mm
- 2) Cushion layer varies in thickness and is dependent of Critical Height of Structure
- 3) Apply a light diluted primer to concrete or asphalt
- 4) Apply binder 3"-9" wide around entire perimeter and extend compacted surface to 3"-9" width



URE-TECH SURFACES

tel: 905-623-0600 • fax: 905-248-3180

www.ure-techsurfaces.com • info@ure-techsurfaces.com